



DUAL-HANDLE BASIN FAUCET

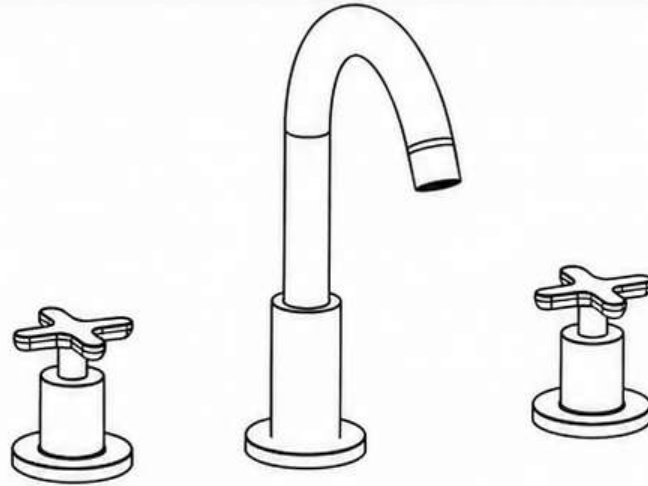


INSTRUCTIONS FOR USE:

- 1 The internal structural parts of the faucet have been professionally assembled, inspected, and tested at the factory. Do not disassemble it on your own, as this may affect the functionality and lifespan of the faucet.
- 2 Before installing the faucet, be sure to open the main valve to flush out any debris such as iron filings or hemp fibers from the water pipes. This prevents clogging and ensures proper water flow and functionality.
- 3 Install the faucet according to the product installation diagram to ensure correct installation. Do not force installation, as this may damage the faucet components.
- 4 The faucet must be correctly connected to the cold and hot water supply lines. When facing the faucet, the left side connects to hot water, and the right side connects to cold water.
- 5 After installation, check all connections to ensure they are tight and there is no leakage at the interface between the faucet and water pipes. Then, open the main water inlet valve to flush the pipes for one minute.
- 6 For any questions regarding the use or installation of the faucet, please contact the dealer.

PRODUCT DETAILS:

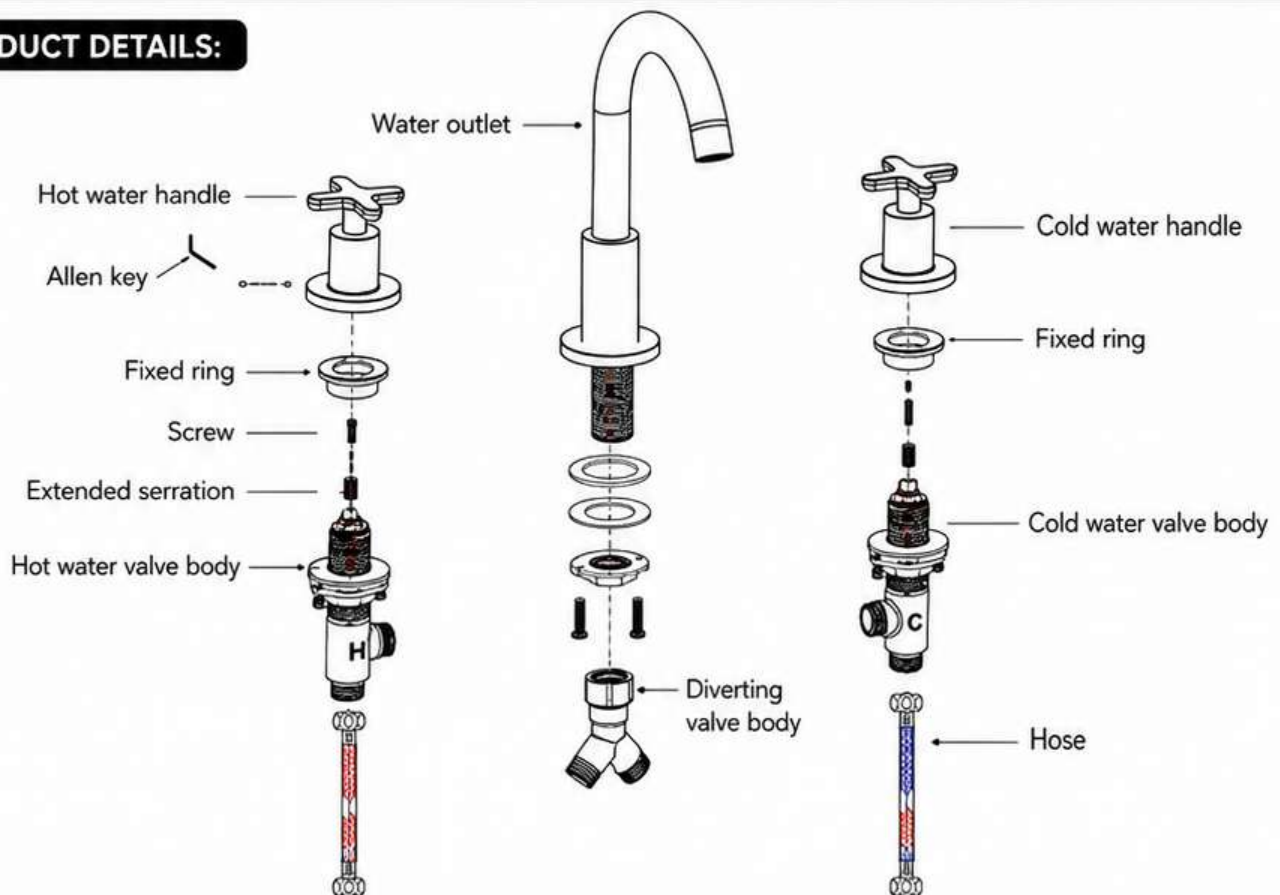


INSTALLATION STEPS

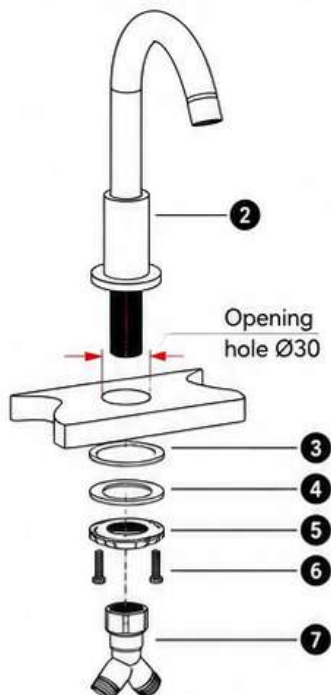

HOW TO INSTALL A WATER OUTLET NOZZLE

- 1 Insert the water spout (2) into the basin from directly above, adjusting the position of the outlet so that it faces directly forward.
- 2 From beneath the basin, slide the rubber gasket (3) and stainless steel gasket (4) (with the rubber gasket on top) onto the threaded pipe.
- 3 Then, thread the nut (5) onto the threaded pipe and tighten it with a wrench.
- 4 Next, secure the screw (6).
- 5 Finally, use a wrench to screw the diverter valve body (7) onto the threaded pipe, adjusting the outlet directions one to the left and one to the right.

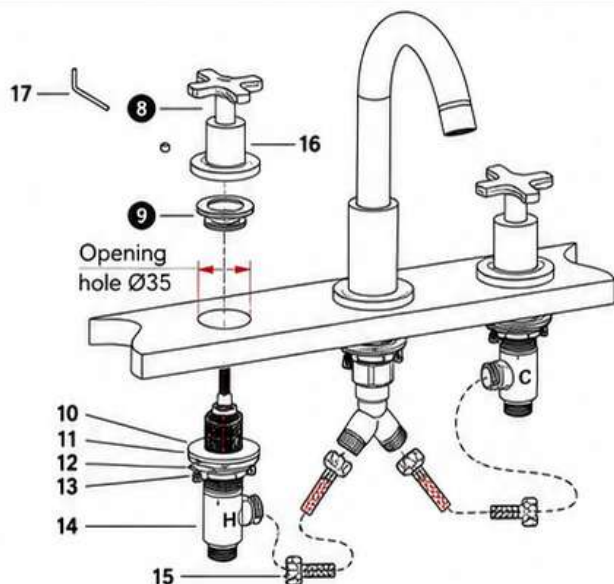

HOW TO INSTALL THE VALVE BODY AND HANDLE

- 1 Disconnect the valve body (14) from the handle (8) and the fixing ring (9), ensuring that the hex cap (12), screw (13), stainless steel plate (11), and gasket (10) remain attached to the valve body (14).
- 2 Assemble the valve body (14) into the sink installation hole from below the sink, connecting it to the fixing ring (9) above the sink. Then, use a wrench to tighten the hex nut (12). When facing the faucet, the valve body assembly with the red mark should be on the left side and connected to the hot water source.
- 3 Ensure that the valve core is in the closed position. Install the handle assembly (16) horizontally onto the fixing ring (9), adjust the handle (16) to the direction shown in the diagram, and use a hex key (17) to tighten the screw to secure the handle assembly. Note: The handle with the red mark should be installed on the left side.



According to the hose installation requirements, adjust the direction of the valve body outlet appropriately, then tighten the screw (13) to secure the valve body. Connect the hose (15) to the valve body and the water divider respectively.



According to the hose installation requirements, adjust the direction of the valve body outlet appropriately, then tighten the screw (13) to secure the valve body. Connect the hose (15) to the valve body and the water divider respectively.



MAINTENANCE INSTRUCTIONS:

To keep the faucet bright, follow the care instructions below:

1. For regular use, simply rinse the faucet with clean water and wipe it dry with a soft cotton cloth.
2. If stubborn stains or film remain on the faucet surface, use a mild liquid detergent or colorless glass cleaner. After cleaning, rinse the faucet immediately and dry it with a soft cotton cloth.
3. Do not use abrasive cleaners, sandpaper, or any rough tools to scrub the faucet.
4. Avoid cleaning the faucet with any acidic cleaners, polishing abrasives, harsh cleaning agents, soap, or similar products.

