



PRECAUTIONS BEFORE INSTALLATION


- 1 Before installation, confirm whether the water inlet pipe and angle valve have been installed correctly.
- 2 Before installation, be sure to flush out the dust, gravel and other foreign objects in the water supply pipe to ensure that there is no debris in the water inlet pipe, so as not to affect the water outlet function.
- 3 Inlet water pressure $0.05\text{Mpa} \leq \text{water inlet pressure} \leq 0.75\text{Mpa}$, if the water pressure is lower than 0.05Mpa , it may cause poor water outlet effect, so a booster pump should be installed in the pipeline.
- 4 Do not mix the cold and hot water pipes wrongly, and do not use steam for the hot water pipes.



RECOMMENDED TOOLS AND MATERIALS



Screwdriver

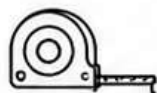

Tape measure



Sealant



PVC pipe



Spirit level




Impact drill




Wrench




PRODUCT INSTALLATION DIMENSION DRAWING

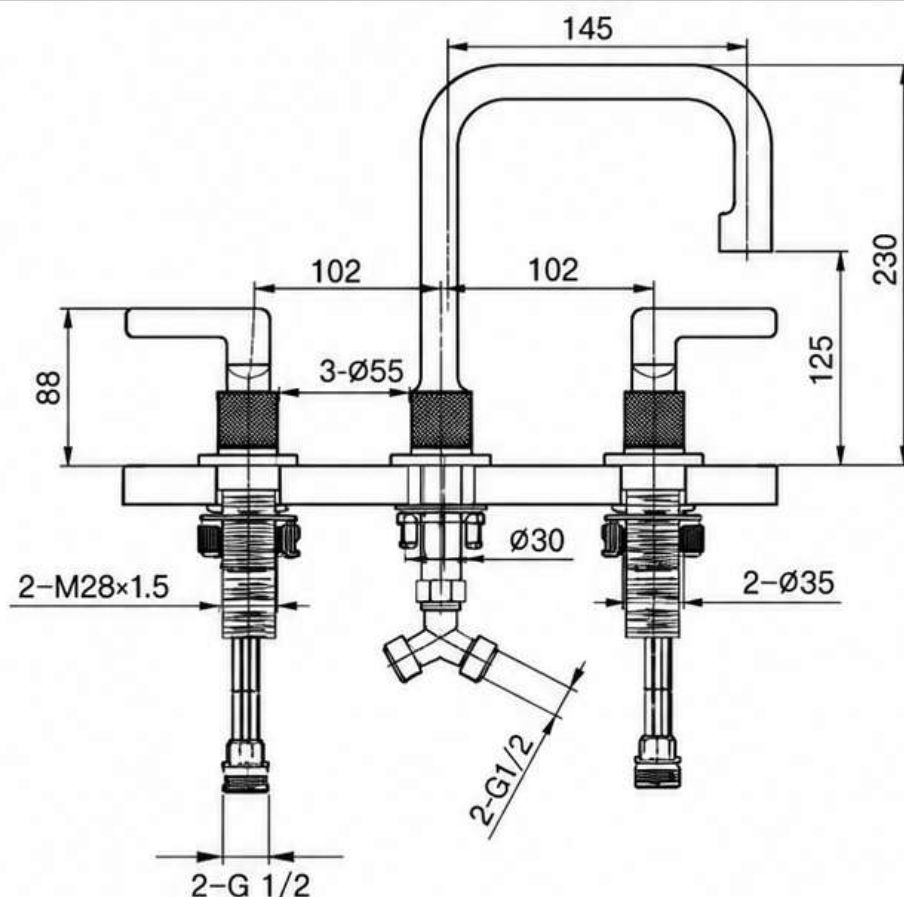


WIDESPREAD BASIN FAUCET INSTALLATION STEPS

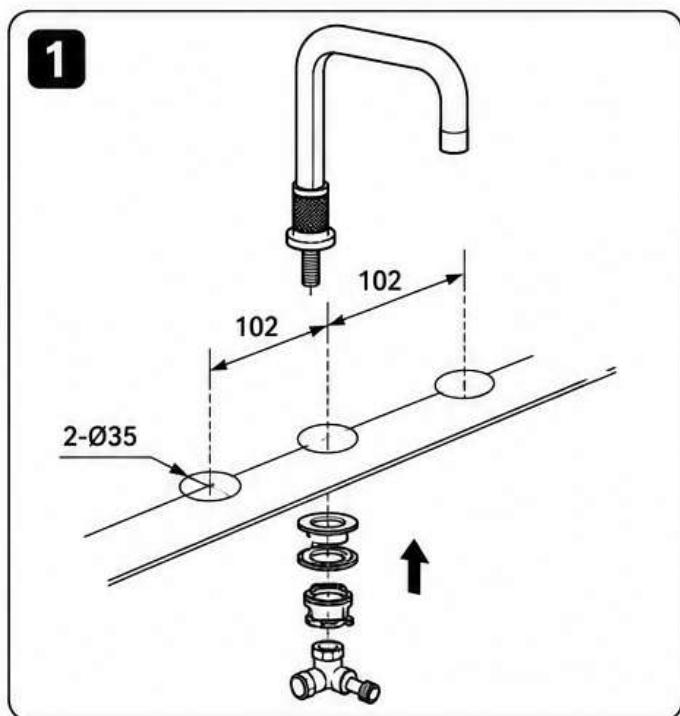


1. Remove the tee joint at the lower end of the water outlet, the fixing nut and the gasket, then install the water outlet into the mounting hole of the table, then lock the gasket and the fixing nut to the water outlet in turn, and finally install the tee joint.

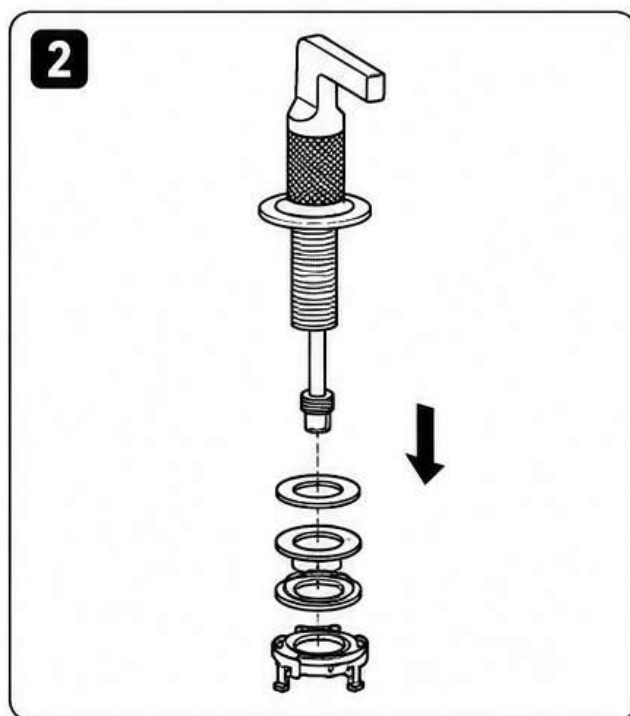

2. Remove the fixing nut and washer under the handle set. (Do not disassemble the handle group above)

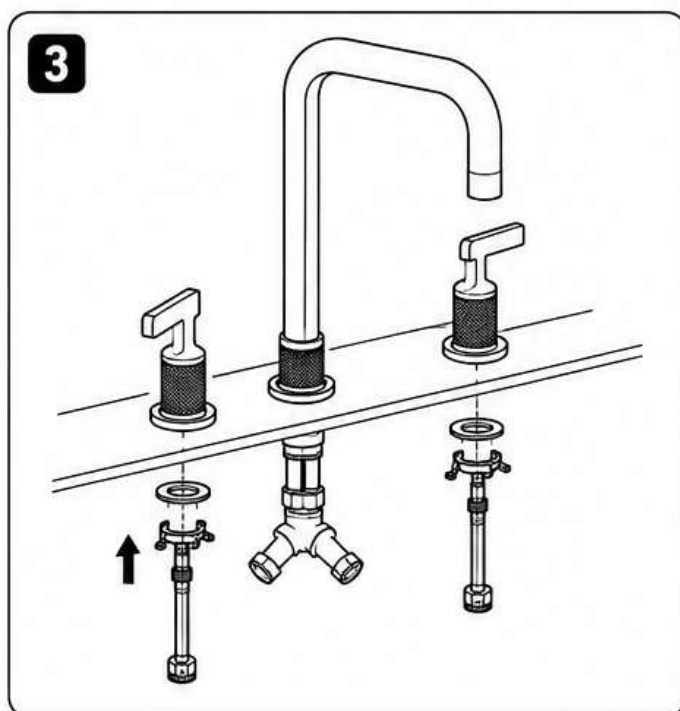

3. Insert the handle set into the mounting hole on the table top, lock the fixing gasket and fixing nut in turn, and then install the water inlet hose into the body.

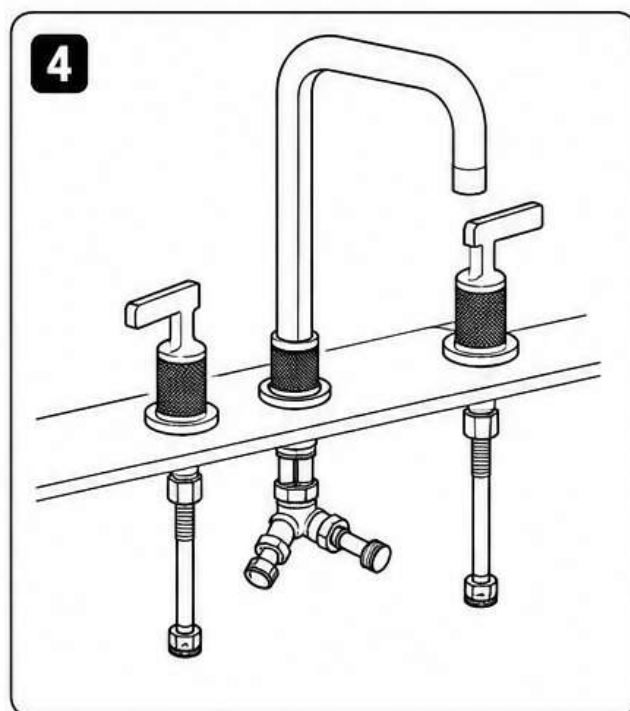

4. Connect the water inlet hose at the handle end with the tee joint of the water outlet.